



KONICA MINOLTA

Data Management Software CS-S10w Standard Installation Guide

Software License Agreement

The terms of the license agreement of the CS-S10w software are provided in the Software License Agreement dialog box displayed on-screen during the installation process. This software can be installed only if you agree to all the terms of the agreement.



Safety Precautions

Before you use the CS-S10w software, we recommend that you thoroughly read this manual as well as the instruction manuals of your PC and the instrument.

Notes on Installation

- The CS-S10w application software is designed to be used with the Windows 10 or Windows 11 operating system. Note that neither operating system is included with this software.
- One of these operating systems must be installed on the PC before this software can be installed.
- When inserting the CD-ROM into the CD-ROM drive, note the correct orientation of the disc. Insert it gently.
- Keep the CD-ROM clean and free from scratches. If the recorded surface becomes dirty or the label surface is scratched, a read error may result.
- Avoid exposing the CD-ROM to rapid temperature changes and condensation. Avoid leaving it in locations where it may be exposed to high temperatures from direct sunlight or heaters.
- Do not drop the CD-ROM or subject it to strong impact.
- Keep the CD-ROM away from water, alcohol, paint thinners and other such substances.
- Remove the CD-ROM from the CD-ROM drive while the computer is turned on.

Formal designations of application software used in this manual

(Designation in this manual)

(Formal designation)

Windows, Windows 10

Microsoft® Windows® 10 Pro Operating System

Windows, Windows 11

Microsoft® Windows® 11 Pro Operating System

Trademarks

- “Microsoft”, “Windows”, “Windows 10”, and “Windows 11” are registered trademarks of Microsoft Corporation in the U.S.A. and other countries.
 - “Intel” and “Pentium” are registered trademarks of Intel Corporation in the U.S.A. and other countries.
- Other company names and product names mentioned in this manual are the registered trademarks or trademarks of their respective companies.

Notes on Storage

- After using the CD-ROM, return it to its case and store in a safe place.
- Avoid leaving the CD-ROM in locations where it may be exposed to high temperatures from direct sunlight or heaters.
- The CD-ROM should not be kept in areas of high humidity.

Every effort has been made to ensure the accuracy of the content of this software. However, should you have any questions or comments, please contact the nearest KONICA MINOLTA authorized service facility.

Package Contents

- Installation CD-ROM of Standard (Qty: 1)

The Instruction Manual is also installed in PDF form with a shortcut in the start menu during the software installation. Versions of the Instruction Manual in other languages are also included on the installation CD-ROM.

System Requirements

OS	Windows 10 Pro 32 bit, Windows 10 Pro 64 bit Windows 11 Pro (English, French, German, Spanish, Italian, Japanese, Traditional Chinese, Simplified Chinese, and Hangul versions) The hardware of the computer system to be used must meet or exceed the greater of the recommended system requirements for the compatible OS being used or the following specifications.
Computer	PC equipped with a processor equivalent to Pentium III 600MHz or better
Memory	128 MB (256 MB recommended)
Hard disk drive	60 MB of available hard disk space
Display	Display hardware capable of displaying 1024 x 768 pixels / 16-bit color or better
Others	CD-ROM drive (required for installation) USB port Ver. 1.10 or later (required for connecting instruments)

Compatible Instruments

Instrument	CS-200
------------	--------

Language

Display language	English, Japanese (Select one during installation.)
------------------	---

1. Installing the software

When installing the software, you must log on to the computer as a user with Administrator privileges.

1.1 Installation procedure

Install the CS-S10w software.

If a dialog confirming the User Account Control is displayed during installation, click either “Continue” or “Yes”. If an error occurs and installation cannot be completed, restart the PC and perform the installation again from the beginning.

1. Start Windows on your computer.
2. Insert the CS-S10w CD-ROM into the CD-ROM drive.
3. In the right of the screen, the message “Tap to choose what happens with this removable drive” is displayed. Click this message, and then click “Run setup.exe”.
If the program does not run automatically, move the mouse pointer to the bottom left corner of the screen. Right-click in the window that is displayed, and then, on the menu that appears, click “Explorer”.
Right-click the DVD or CD drive, and then, on the menu that appears, click “Install or run program from your media”.
4. The Select Language dialog box opens. Select the appropriate language and click “OK”.
The following procedure assumes that English is selected.
5. Click “Next”.
6. Read the software license agreement carefully. If you accept the terms of the agreement, select “I accept the terms in the license agreement”, and click “Next”.
7. The set-up program asks you to choose the folder in which you want to install the software. To install the software in another location, click the “Change” button, select or type the path to the location and click “OK”.
8. Click “Next” and then click “Install”.
The set-up program will begin copying the files.
9. This completes the installation process. Click “Finish”.

1.2 Creating a shortcut

When CS-S10w has been installed, a shortcut to CS-S10w is registered in the Windows Start Menu. To place a shortcut in another location such as the Desktop, create it with Windows Explorer or another program.

1.3 To uninstall

1. Move the mouse pointer to the bottom left corner of the screen, and then right-click in the window that is displayed. On the menu that appears, click “Programs and Features”.
2. In the “Programs and Features” list, select “CS-S10w”, and then click “Uninstall”.
3. A dialog box for confirming that you want to uninstall the application appears. Click “Yes”.
4. A dialog box for confirming that you want to update the software appears. Click “Yes”.


2. Connection

Connecting an instrument to your PC with the USB cable enables you to control the instrument with the CS-S10w software or to exchange data between the PC and instrument. When you connect the instrument to a PC for the first time, you need to install the USB driver.

2.1 Connecting the instrument to your PC/Installing the USB driver

Although the USB cable can normally be connected/disconnected even while the instrument and the PC are running, you must turn them off in the following procedure before connecting the cable.

1. Turn off both the instrument and the computer.
2. Connect the instrument and the computer via the USB cable as illustrated. Connect the computer end of the cable to the USB port of the computer.

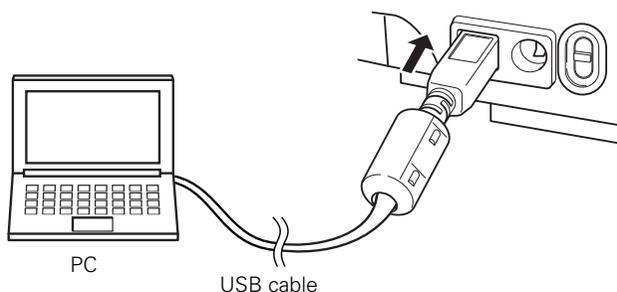

Notes:

- Attach the connectors securely in the correct orientation.
 - Do not touch the terminals of the connector. Keep them clean and do not apply excessive force.
 - Use a cable of sufficient length. If the cable is too short, a connection failure or disconnection may result.
 - To disconnect the cable, grip the plug or connector securely. Do not pull the cable or bend it with excessive force.
3. Turn on the instrument and the computer.
 4. Start Windows on your computer.
 5. Move the mouse pointer to the bottom left corner of the screen, and then right-click in the window that is displayed.
 6. On the menu that appears, click “Device Manager” to open Device Manager.
 7. Right-click “CHROMA METER”, click “Update Driver Software”, and then click “Browse my computer for driver software”. For the destination to search, specify the name of the folder in which the software (CS-S10w) has been installed, and then click “Next”.
 8. This completes the installation procedure.